

Quick Start Guide for Hamster Air™



1. Remove plastic film



2. Pull up on red tab




3. Discard


For more complete instructions, please see the Hamster Air User Guide.

How to use

1. Place your finger into the center of the reader

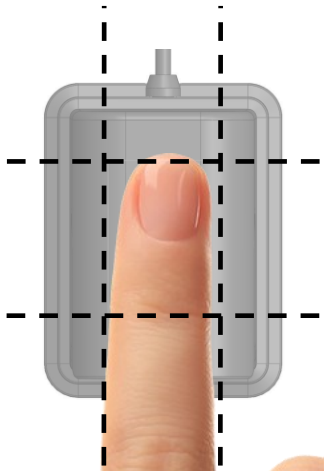

2. Keep your finger flat, straight and centered

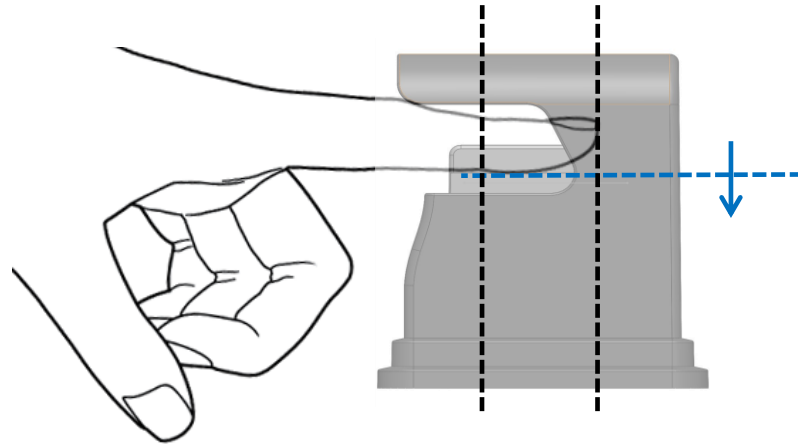

Enrollment

3. Slowly lower your finger until you get a large, clear fingerprint



Matching

3. Slightly raise or lower your finger until you get a match




How to clean



1. Find tab at bottom



2. Press tab and squeeze

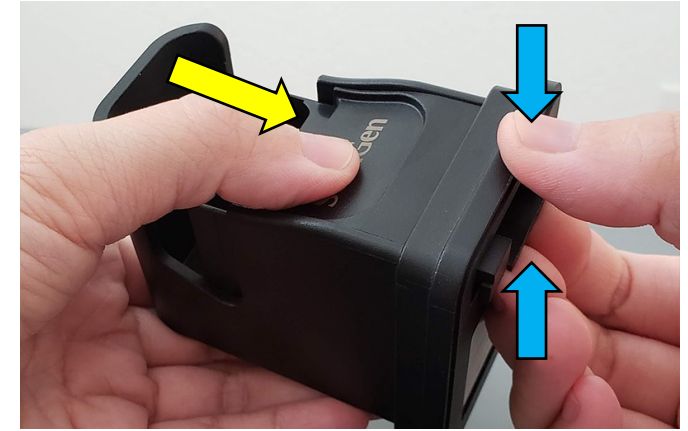

3. Press panel at same time



4. Slide out front panel



5. Wipe glass with cloth



6. Replace front panel